


Prestige® SpaceSaver™ Cutting Pad

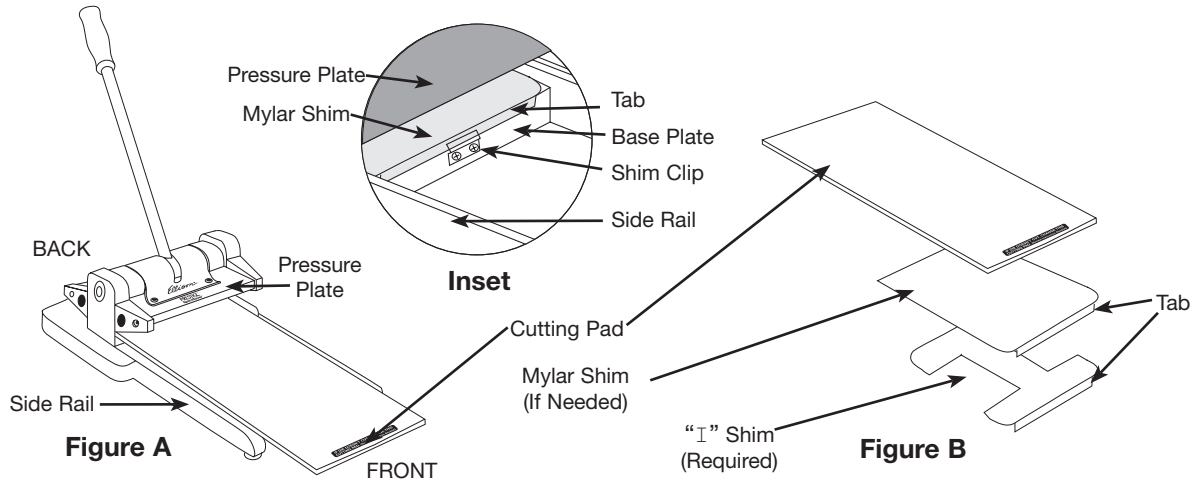

Replacing the Cutting Pad

Please note that these instructions apply to both the SS Standard Cutting Pad and the CSS Premium Cutting Pad.

1. When both sides of Cutting Pad no longer cut at least four sheets of construction paper with one pull of the handle, or scissors are required to complete a cut, the Cutting Pad needs to be replaced.
 2. Slide the Cutting Pad (Figure A) out of the machine and discard.
 3. Remove and save all Mylar Shims (Figure B) under the Cutting Pad.
 4. Replace the "I" Shim in the machine, making sure the "I" Shim Tab (Figure B & Inset) is securely inserted in the Shim Clip (Inset). Keep the "I" Shim in the machine AT ALL TIMES to properly distribute cutting pressure.
 5. Insert new Cutting Pad into the machine on top of the "I" Shim.
 6. Check the Cutting Pad height using the following procedures:
 - a. Place a Large Die with a symmetrical design (letter "O," "S" or Flower #1A) rubber side down on the Cutting Pad and slide into the machine with NO paper. Then pull the handle down once.
 - b. Slide the die and the Cutting Pad out of the machine to check the impression made by the die on the Cutting Pad. There should be a LIGHT impression of the entire die design on the Cutting Pad.
 - c. If no impression or an incomplete impression is made, add one Mylar Shim at a time, checking the die impression between the addition of each shim (maximum of four). Make sure the Shim Tabs are completely folded on the crease line and secured in the Shim Clip (Inset). There are extra Mylar Shims in the Tool Kit that came with the machine. Always leave the "I" Shim in the machine.
 - d. When a complete impression appears, try cutting four pieces of construction paper. If all pieces cut completely through, the Cutting Pad height is correct.
- Turn Cutting Pad over routinely (weekly for high usage) for even wear on both sides.

17886 - SS Standard Cutting Pad
17357 - CSS Premium Cutting Pad